


MEASURING WINDOWS WITH HARDWARE

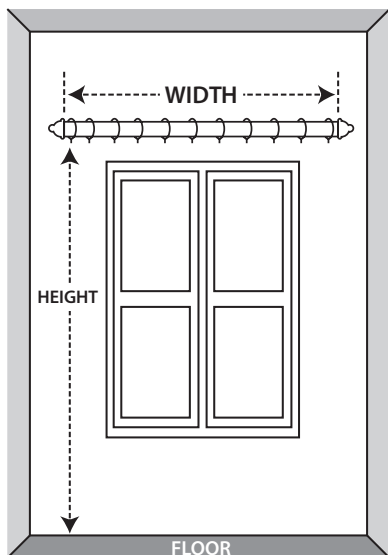

A HOW TO MEASURE-UP YOUR CURTAINS

Measuring Width:

- Measure the distance between the two ends of the track / rod (not including the finials).

Measuring Length:

- For curtains with French Pinch heading: measure from the bottom of the rings to the floor.
- For curtains with Rod Pocket/Belt Hang heading: measure from top of rod to the floor.

B HOW MUCH FABRIC WILL YOU NEED?

Curtain Width:

Our curtains come in panels of varying widths. You can choose one panel, or multiple panels to achieve your desired look.

- For curtains with French Pinch heading choose the panel width that is at least equal to, or more than your actual rod/ track width measurement.
- For curtains with a Rod Pocket / Belt Hang heading you will require fabric panels that measure at least 2 x the actual rod/ track width measurement.

Curtain Drop (Length):

The length of curtain you will require depends on the style or look you want to create.

Our curtain lengths are measured from the top edge of the fabric to the bottom hem. Please choose the length of the curtains according to our recommendation (right).



Curtains end just before they hit the floor. Measure your length from the top edge - stopping 3 - 5 cm up from the floor.



Curtains have a very slight spill of fabric touching the floor. Add approx 3 - 5 cm to the full height measurement.




For longer, more luxurious curtains that puddle in folds, add between 10 - 20cm to the full height measurement.

MEASURING WINDOWS WITHOUT HARDWARE

A How to measure-up for your hardware.


Measuring Width:

- Measure the width of the window frame and then add 30/40cm (12-16") each side of the window. This will ensure your curtains will comfortably cover your window and also allow for gathering of material on each side when the curtains are fully drawn.
- Ensure you consider the wall space needed to add decorative finials to your rod - these are not usually covered in a rod size, they add extra length to your rod size (by approx. 5cm each).

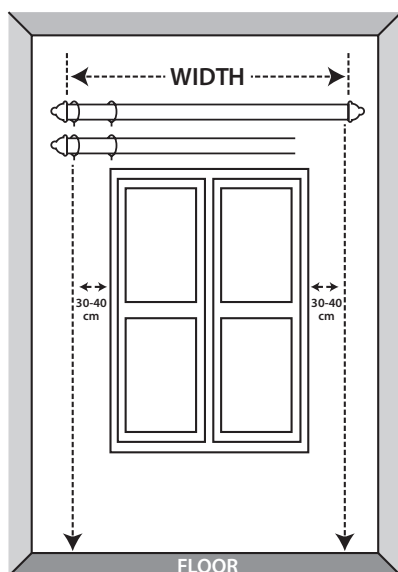

Measuring the height to install:

- Consider how high you want your curtain rail / track – the standard height is approx. 10 – 15 cm above the top of the window frame.
- To add the impression of height to a room, mount the rod/ track closer to the ceiling.

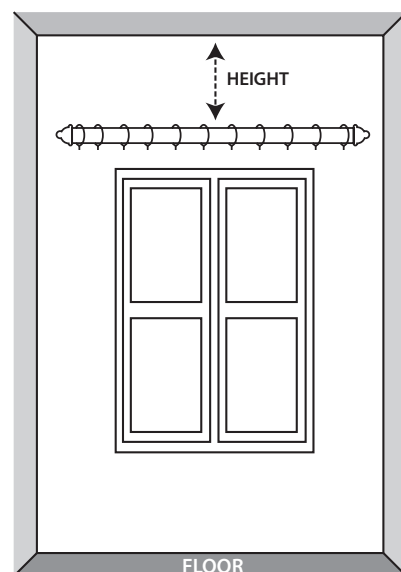

Now you have your rod position - height and width, use the above curtain measurement guide to select the correct panel sizes for your curtains.